Contents

1. Safety information 6
2. Your AURO M401 mobile phone 9
    2.1 Keys and ports 10
    2.2 Screen symbols 15
3. Getting started 16
    3.1 Inserting the SIM card and battery 16
        3.1.1 Inserting/Replacing the battery: 16
        3.1.2 Removing the battery 17
        3.1.3 Inserting the SIM card 18
        3.1.4 Inserting the microSD card 19
    3.2 Charging the battery 20
    3.3 Turning the phone on and off 21
    3.4 Using the headset 21
4. Menu quick reference 22

5. Basic functions 27
5.1 Turning the phone on and off 27
5.2 Making a call 28
5.2.1 Direct dialling 28
5.2.2 Selecting a number from the phone book 28
5.3 Making an international call 29
5.4 Accepting or rejecting a call 29
5.4.1 Accepting a call 29
5.4.2 Rejecting a call 29
5.4.3 Ending a call 30
5.5 During a call 30
5.5.1 Changing the speaker volume during a call 30
5.5.2 Hands-free / Speaker mode 30
5.5.3 Call options 31
6. Special keys 32
6.1 Torch 32
6.2 Direct dial keys: M1, M2, M3 32

6.3 One-click SOS button 32
7. Phone book 34
8. Messages 36
8.1 Writing a message 36
8.2 Inbox 38
8.3 Outbox 39
9. Call list 39
10. Alarm 40
11. User profiles 42
11.1 User profile options 42
11.1.1 Activate 42
11.1.2 Customise 42
12. Settings 44
12.1 Date and Time 44
12.1.1 Setting the time zone 44
12.1.2 Setting the date/time 44

12.1.3 Setting the format 45
12.2 SOS-button set-up 45
12.2.1 SOS number 46
12.2.4 SOS-SMS content 46
12.3 Setting direct dial keys: M1, M2, M3 47
12.4 Telephone settings 47
12.4.1 Language 47
12.4.2 Screen saver 48
12.4.3 Speed dialling 48
12.4.4 LCD lighting 48
12.5 Call settings 48
12.6 Network settings 49
12.6.1 Network selection 49
12.6.2 Preferred networks 49
12.7 Security settings 49
12.7.1 SIM card lock 50
12.7.2 Phone lock 50

12.7.3 Automatic keypad lock 51
12.7.4 Changing the password 51
12.7.5 Administrator mode 51
13 Restoring the factory settings 52
14 Camera and photo album 52
14.1 Using the camera 52
14.2 Using the photo album 53
Warranty 55

1. Safety information

Please read through this information carefully before using your mobile phone.
Not following the advice can be dangerous.

Do not use the mobile phone near chemical equipment, refuelling stations or any other facilities containing explosive substances.

Keep the phone away from children.

If you are driving a vehicle, please use the headset included with the phone or else drive to a parking place first. Adhere to the local laws.

Turn your phone off before entering an aircraft and keep it turned off until the aircraft is once again in the park position.

Avoid using your phone in hospitals as far as possible, and do not use near persons with pacemakers, where interference could prove life threatening.

We cannot offer any guarantee if accessories not directly supplied by the manufacturer are used.

Never open the phone to try and repair it. Should you experience any problems, please contact our Customer Care.

Please do not charge the mobile phone when there is no battery inserted.

Charge the phone preferably only in well-aired places and keep it away from highly inflammable or explosive substances.

To avoid losing your data due to demagnetisation, keep your phone away from magnetic tapes or stripes, diskettes and magnets.

Keep the phone away from liquids. Should any liquid seep out of the phone, remove the battery and contact your vendor.

Avoid using the phone in extreme temperatures, either high or low. Never leave the phone in direct sunlight or where there is high humidity.

Use only a soft cloth to clean the phone. Never use liquids, a wet cloth or strong cleaning fluid to clean the phone.

2. Your AURO M401 mobile phone

2.1 Keys and ports

Key	Description
	M1 key Press the key for about 3 seconds and the number you have saved is dialled directly.
	M2 key Press the key for about 3 seconds and the number you have saved is dialled directly.
	M3 key Press the key for about 3 seconds and the number you have saved is dialled directly.
	Call key This key is used to start the dialling process or answer a call. Press this key briefly to open the redial list.

	Navigation key Press this key to move up, down, left or right in a menu. In the menu selection mode, you can press the left arrow to go back to the previous menu item or the right arrow to select a menu item. In image view mode, you can move back and forth through the individual images by scrolling with the left or right key.
	OK key You use this key to confirm a Yes/OK selection or to select the options for the chosen menu item.
	Back key You use this key to delete the last character entered in text input mode or to go back to the previous menu item.

	End call/Turn off key When writing text, this key is used to delete the last character entered. When there is an incoming call, you can reject it by pressing this key. When a call is in progress, you use this key to hang up and end the phone conversation. Press this key for around 3 seconds and then confirm with the OK key to turn off the phone.
	Number keys These are used in the standby mode to directly enter the telephone number that is to be called. If you have activated the speed dialling function, you can dial stored phone numbers by pressing and holding their assigned keys 2-9. When writing text, you use these keys to select

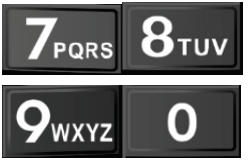	letters. On pressing the 0 key for around 3 seconds you enter the language selection menu.
	*** key** Press this key to select special characters when writing text.
	# key A long key-press of this key in standby mode activates the "Silent" user profile (e.g. you don't want the annoyance of the mobile phone ringing and drawing attention to you in a concert). Another long key-press of the #-key activates the previously chosen profile. (default is "General")

		When writing text, switches between smart input, ABC, abc and 123.
Side buttons		**Volume key** Use this key to navigate up or down in a menu or to adjust the volume up or down.
		SOS button Press this button upwards to activate the emergency call mode and send your stored SMS message to up to three phone numbers, and then telephone until one of those called answers the phone.
		Torch button Use this button to turn the torch on and off.

2.2 Screen symbols

- Strength of mobile communication signal
- Alarm
- Battery charge level
- Keypad lock
- Headset mode
- Missed calls

Ring mode:

- Ring only
- Vibrate only
- Silent
- Vibrate, and then ring
- Vibrate and ring

3. Getting started

3.1 Inserting the SIM card and battery

3.1.1 Inserting/Replacing the battery:

Press the end call (hang-up) key for about 3 seconds and then confirm with the OK key to turn off the phone.
Open the battery compartment by pushing the battery compartment flap downwards.

3.1.2 Removing the battery

Turn the phone onto its back and remove the battery by grasping it in the middle at the bottom and simply lifting it out.

3.1.3 Inserting the SIM card

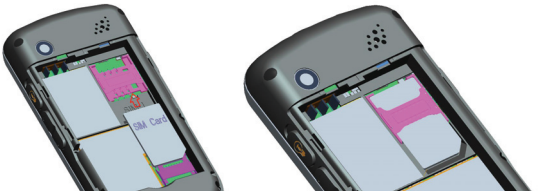

Lay the SIM card down carefully in the recess and push it cautiously under the protective holder until it no longer moves. Then re-insert the battery and close the battery compartment cover. After switching on the phone you are prompted to enter the PIN number of the SIM card. Enter the four-figure number that you have received from your network operator along with the SIM card and confirm by pressing the OK key. After entering the PIN number the phone switches into language selection mode. Select the desired language for the menus (e.g. English) and confirm with the OK key.

3.1.4 Inserting the microSD card

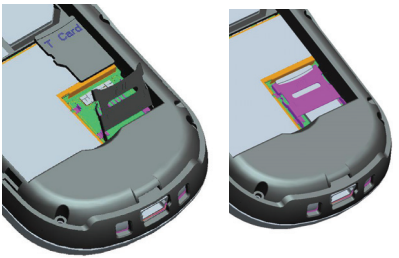

Slide the flap of the microSD card holder approx. 1 mm in the direction of the telephone charging contact in order to release the lock. Then lift the flap and place the microSD card into the provided recess. Close the flap again by placing the cover onto the microSD card and then sliding it approx. 1 mm in the direction of the upper part of the mobile phone until it engages.

3.2 Charging the battery

Use only the desktop charger and travel adapter supplied to charge the phone.

3.3 Turning the phone on and off

Turn the phone on or off by pressing and holding the respective key for around 3 seconds. When turning off, confirm the action by pressing the OK key.

3.4 Using the headset

Connect the supplied headset to the 2.5 mm headset jack on the top of the mobile phone. The phone then switches into headset mode automatically.

4. Menu quick reference

First level	Second level	Third level
Phone book	Find	
	New entry	SIM
		Telephone
	Copy all	From SIM
		From telephone
	Delete	From SIM
		From telephone
		One after the other
	Caller group	Friends
		Family
		VIP
		Business
		Other

	Mini-photo	
	Ring tone	
Messages	Write	
	SMS inbox	
	SMS outbox	
Settings	SOS settings	SOS number settings
		Direct dial settings
		Reminder to take medicine
	Display settings	Time and Date
		Font size
		Background
		Themes
		Timetable turn on/off
		Background lighting
	Language	
	Date entry language	Dictionary support Abc

		Multitap ABC
		Multitap abc
		Numeric 123
	Smart input	Dictionary support On/Off
	Customise	Ring tone selection
		Volume adjustment
		Call signalling
		Ring tone type
		Extra tone
		Answer mode
		Display settings
	Network settings	Network selection
		Preferred networks
	Safety settings	Administrator mode
		SIM lock
		Phone lock

		Automatic keypad lock
		Change password
	Restore factory settings	
Profiles	General	Activate
		Customise
	Meeting	Activate
		Customise
	Outdoors	Activate
		Customise
	Indoors	Activate
		Customise
	Headset	1 Edit
	Offline (flight mode)	Customise
		2 Edit
	Silent	

Alarm		
Extras	Organiser	Anniversaries
	Call list	Missed calls
		Calls dialled
		Calls received
		Phone number store
		Call duration
		SMS counter
		Auto quick end
	Image viewer	
	UHF radio	
	Tasks	
	Calculator	
	Stopwatch	

5. Basic functions

5.1 Turning the phone on and off

Press the red end call (hang-up) key for about 5 seconds to turn the phone on.
If you have not inserted a SIM card, the phone displays: "Insert SIM".
If the SIM card has been inserted, the phone asks you to enter the PIN number.
Enter the PIN number and press the "OK" key.
The factory preset code for the phone lock (password) is "1122". However, the phone lock is deactivated in the factory.
Press the red end-call key again for about 3 seconds and confirm with the "OK" key to turn the phone off.

⚠ **Remark:** If the phone still displays "Insert SIM" after a SIM card has

been inserted, make sure it has been inserted correctly. If this fails, please contact your network operator since the card may possibly be faulty.

5.2 Making a call

5.2.1 Direct dialling

Enter the telephone number including the dialling code and press the green call key.

⚠ **Remark:** Press the "Back" key to delete a digit.

5.2.2 Selecting a number from the phone book

You access the internal phone book by pressing the Navigation key upwards or by pressing the OK key to enter the main menu and then selecting the phone book icon there. To dial a phone number that is in the phone book, press the Navigation key to select the desired entry and then

press the green call key.

5.3 Making an international call

Press the "*" key twice to select the usual international dialling code in mobile communication (the + character replaces the usual leading double zero of the fixed network), and enter the country code, area code and phone number (e.g. +49 1805 11 44 02 instead of 0049 1805 11 44 02), Press the green call key to start the dialling process.

5.4 Accepting or rejecting a call

5.4.1 Accepting a call

To accept a call, press the green call key.

5.4.2 Rejecting a call

To reject a call, press the red end-call key.

5.4.3 Ending a call

To end a conversation, press the red end-call key.

5.5 During a call

5.5.1 Changing the speaker volume during a call

You can adjust the earpiece volume during a call by moving the volume key on the side of the phone.
When you have turned on the hands-free feature, you can adjust the speaker volume with the "Volume" key.

5.5.2 Hands-free / Speaker mode

During a call you can switch over to speaker mode. Please do not hold the phone close to your ear while you have the speaker function switched on. To activate the hands-free mode, press the silver activation button during a

call. To return to telephone mode, please press the "Confirmation" key once again.

5.5.3 Call options

If you press the "OK/Options" key during a call, you are able to select the following functions:

Hold:	Place a call on hold
End:	End a call
New call:	To receive or make a new call during an active call.
Phone book:	Direct access to the phone book
SMS:	You can write and read SMS messages in the message centre
Mute:	Turns the microphone off
Hands-free:	Turn speaker/hands-free function on or off

6. Special keys

6.1 Torch

Press the slide button to turn the torch on and off.

6.2 Direct dial keys: M1, M2, M3

Press keys M1, M2 or M3 to dial the telephone numbers assigned to them directly.
The settings for this can be found under
Settings -> SOS settings -> Direct dial settings -> Set number -> M1, M2, M3, 1, 2, 3, 4, 5, 6, 7, 8

6.3 One-click SOS button

Push the **SOS button** upwards to select the emergency call number

stored there under. If the number is still empty, please enter a phone number and an SMS message under Settings -> SOS settings -> SOS number settings:

SOS number: You can store up to 5 SOS emergency numbers here. Please always enter the number with a country code (e.g. +44 for United Kingdom) so that an emergency call can be made even when abroad. Please avoid using phone numbers with an answering machine because the phone calls one number after another until a called party answers.

SOS message: You can define an SOS-SMS message that will be sent to the emergency number after the SOS button is pressed.

7. Phone book

Press the "OK" key in the Standby menu to open the phone book.

Find: Use the numeral keys to enter the first letters of the name you are seeking. With the "#" key you can switch between upper and lower case and numeric input. Then select the name you are seeking with the "Up/Down" key.

If you press the left silver key, you can select the following options:

New entry: This option allows you to add a new entry to the phone book. You can save your phone book entries on the SIM card or on the phone. A new entry on the SIM card contains only the name and phone number. When saved on the phone, you can add further

information such as address, phone number at home or in the office and fax number.

Delete: Pressing the "OK" key here deletes the entry. By pressing the "Back" key, you can return to the phone book.

Copy all: Here you have the option to copy all SIM card entries "from the SIM" onto the mobile phone, or to copy all phone book entries "from the phone" onto the SIM card.

Delete all: Delete all phone book entries: "from the SIM" or "from the phone" When you use this function, your phone asks you to enter the Admin password: default is "1122".

Caller group: You are able to assign certain ring tones to a group of contacts from your phone book. From the ring tone alone, you can distinguish between business calls

and those from family and friends. The different ring tones, display images and group associations of your contacts can all be managed here.

Ring tone: A certain ring tone can be assigned to a particular person here.

8. Messages

Your phone is able to send and receive SMS messages. This function is a standard service provided by your mobile network operator. Should you have any queries in this regard, please contact the relevant Service-Team. SMS messages are stored on the phone or the SIM card. Once the storage space is all used up, the oldest messages are deleted automatically.

8.1 Writing a message

To write a message, press the "Navigation" key downwards and then

select the "Write" function with the "OK" key.

In write mode you are able to select the following menu options:

Save and send: Once you have finished writing the message, you can exit from write mode with this option and send the SMS. Having selected "Save and send", the phone will prompt you to enter the telephone number to which the SMS is to be sent. You may either select the number directly from the phone book or enter the number manually. Pressing the "OK" key sends the SMS and saves a copy in outgoing SMS.

Save: You can also save the message as a draft for subsequent sending.

Send to multiple recipients: You can also send the message to multiple recipients by selecting this option.

Send to group: You can also send the message to all members of the group "Family", "Friends", "Business", "VIP" or other.

8.2 Inbox

All incoming messages are displayed in the inbox.
By pressing the menu/OK key you are able to select the following options:

Reply:	Reply to the message.
Delete:	Delete the chosen message.
Edit:	Edit the chosen message.
Forward:	Forward the message.
Copy to phone/SIM:	Copy the message to the phone/SIM card.
Move to phone/SIM:	Move the message to the phone/SIM card.
Copy all:	Copy all messages.
Move all:	Move all messages.
Use number:	Use the sender's number to save or call.

8.3 Outbox

In the outbox too you can scroll through the messages with the "Up/Down" key. Pressing the "OK" key opens the following options:

Send:	Send the chosen message.
Delete:	Delete the chosen message.
Edit:	Edit the chosen message.
Copy to phone/SIM:	Copy the message to the phone/SIM card.
Move to phone/SIM:	Move the message to the phone/SIM card.
Copy all:	Copy all messages.
Move all:	Move all messages.
Use number:	Use the sender's number to save or call.

9. Call list

The phone stores the last 20 calls that have been missed, phone numbers dialled and accepted calls.

Once the storage for 20 phone numbers is full, the oldest entry is deleted each time.

After selecting an entry you have the following options:

Delete: Delete the entry. Confirm with the "OK" key.

Save: Save the number in the phone book.

Call: Press the green call key to call the number.

Edit: Edit the phone number.

Send SMS: Send an SMS to this phone number.

10. Alarm

You can set 5 alarm times.

The following options are available to you in the alarm edit mode:

Turn Off/On: You can select with the "Navigation" key.

Time: You set the wake-up time.

Repeat: With the "Navigation" key you can select whether the alarm is to sound **once only**, **daily** or on certain

weekdays.

Audio setting: With the "Navigation" key you can select whether the UHF radio "**FM-Radio"** or a ring tone "**Tone"** is to give the wake-up.

Snooze (mins): With the "Navigation" key you can select the time interval until the next automatic repeat alarm. The can select from 1 to 10 minutes.

Alarm type: With the "Navigation" key you can select a setting from **Vibrate and Ring**, **Ring** or **Vibrate only**.

Content: Here you can enter what is to be shown on the display.

11. User profiles

General
Meeting
Outdoors
Indoors
Headset
Offline (flight mode)

11.1 User profile options

11.1.1 Activate

This activates the particular profile

11.1.2 Customise

Ring tone selection: Select tones here for call signalling, alarm, turn-on,

	turn-off, messages and keys.
Volume:	Adjust the volume of the ring tone and keypad tone here.
Signalling:	Ring, Vibrate only, Vibrate and ring, Vibrate then ring.
Ring tone type:	Once, Repeat or Ascending.
Extra tone:	You can set extra tones such as warning and error message tones here.
Answer mode:	You can activate call acceptance by any key with this.
Display settings:	Allows direct entry into the display settings menu.

Remark: Press the #-key in standby mode for about 5 seconds to switch directly into silent mode.

12. Settings

Use the Navigation key in the menu to move to the "Settings" function to configure your mobile phone.

12.1 Date and Time

12.1.1 Setting the time zone

Use the Navigation key to move around in the menu.

12.1.2 Setting the date/time

Use the Navigation key to move around in the menu.
You can set the time of day, date and summer time. You can move to the left or right in the menu item by using the * and # keys.

12.1.3 Setting the format

Time format: You can switch between 12- and 24-hour clocks with the "Navigation" key.

Date format: You can switch between YYYY-MM-DD, MM DD,YYYY, DD-MM-YYYY, DD/MM/YYYY,MM/DD/YYYY and YYYY/MM/DD formats with the "Navigation" key.
You save the selection by pressing the OK key.

12.2 SOS-button set-up

You will find the emergency call/SOS settings in the menu under Settings -> SOS settings-> SOS number settings. Use the Navigation key to move around in the menu.

Remark: Simply activate the SOS button when you first put the mobile phone into service. The phone then opens the SOS settings menu directly

and you can alter the following entries.

12.2.1 SOS number

Enter up to 5 phone numbers to be called in an emergency.

Remark: Please note that the phone first sends an SMS to all of the phone numbers and then tries to dial the numbers. If the first number cannot be reached within the first 30 seconds, the phone dials the next number until somebody answers the phone at one of the numbers.
Attention! Please make sure that you do not enter any phone numbers with an activated mobile box or answering machine, otherwise your emergency call might only reach a machine.

12.2.4 SOS-SMS content

Enter the SOS-SMS message that is to be sent on pressing the SOS button.

12.3 Setting direct dial keys: M1, M2, M3

Enter here the 3 direct dial numbers. Thereafter, pressing either M1, M2, or M3 will dial the desired number directly.

Remark: Simply activate the M1, M2- or M3-key when you first put the mobile phone into service. The phone then opens the direct dial settings menu directly where you can set up the 3 keys as well as the speed dialling function for numeric keys 1-8.

12.4 Telephone settings

12.4.1 Language

Use the Up/Down key to navigate within the menu.

12.4.2 Screen saver

Use the Up/Down key to navigate within the menu.

12.4.3 Speed dialling

Use the Up/Down key to navigate within the menu.
Assign speed dial numbers to number keys 2-9, which when then pressed and held dial the respective number.

12.4.4 LCD lighting

Use the Up/Down key to select one of the 5 contrast levels.

12.5 Call settings

The call settings can be found under Options whilst call is in progress.

Use the Navigation key to move around in the menu.

12.6 Network settings

12.6.1 Network selection

Network selection Switch to manual network selection to choose the desired network from a list, otherwise switch to automatic search for a network (factory setting).

12.6.2 Preferred networks

The list of preferred networks has been preset on the SIM card by your mobile network operator.

12.7 Security settings

This is where you set all of the passwords and safety functions of your mobile phone.

12.7.1 SIM card lock

This phone is not preset on a fixed SIM card. However, your SIM card is provided with a password, in this case a PIN number, for protection against theft. When you switch on your phone, it prompts you for this PIN number to make sure that you are the owner of this SIM card.

Remark: If you have entered your PIN number wrongly 3 times, you will need the PUK number from your mobile network operator to unlock the SIM card again.

12.7.2 Phone lock

You can also protect your phone against unauthorised use. If the phone lock is on, when you switch on you are prompted to enter this password in addition to entry of the SIM password.

Attention: The factory preset **code** of **1122** should be altered as soon as possible.

12.7.3 Automatic keypad lock

The keypad lock is activated automatically if you do not press any keys on your phone for a certain length of time. The values you can select for this time are none, 5 seconds, 10 seconds, 30 seconds, 1 minute and 5 minutes. Select "none" (the factory setting) to turn this function off. Please use the keypad lock button to lock and unlock.

12.7.4 Changing the password

Here you can alter PIN, PIN2 and the phone lock password.
Remark: the password must be 4-8 characters long.

12.7.5 Administrator mode

Once you have configured the phone, this function allows you to protect all of the settings and the phone book against unauthorised changes. The user can only add entries to the phone book and no longer alter or delete

anything.

Remark: Use this function only if you have also set up SOS and M1, M2 and M3 beforehand, and are certain that the user wants to use the phone in user mode with restricted rights.

13 Restoring the factory settings

This function allows you to reset the phone to the original factory settings.

Remark: This function requires entry of the correct phone lock password (**factory setting: 1122**). Some settings require a restart for complete recovery.

14 Camera and photo album

14.1 Using the camera

The camera is activated via the **main menu** and the **"Camera"** menu item with the camera symbol.

Select the detail that you wish to photograph, and operate the shutter by pressing the **"OK button"**. The picture is automatically stored in the photo album on the memory card.
You can return to the main menu by pressing the **“Back button”**.

14.2 Using the photo album

The image viewer is activated via the **main menu** and the **"Photo album"** menu item. Here you can view the photos that have been taken and use them as a background, for example, or save them in the phone book as a picture for a contact.
If you are called by a contact with a stored “caller picture”, the photo appears in the display during the call and you can see at a glance who is calling.

The function can be found in the menu under:
Main menu -> Photo album -> Picture viewer –> Select picture -> Option:

Here you can select from the following functions:

1 View, 2 Use, 3 Send, 4 Rename, 5 Delete, 6 Delete all, 7 Sort

Under “3 Use” you can choose whether to use the picture as a background, screensaver, start-up screen, shut-down screen or caller photo in the phone book.

Warranty

On the assumption that the mobile phone is used properly, International Brand Distribution GmbH, Fahrgasse 5, 65549 Limburg provides a 24-month warranty from the date of purchase. This declaration of warranty covers all legal claims. Within the warranty period, all faults will be repaired free of charge or else the unit will be replaced with a new one at no cost if the defect is attributable to a fault in manufacturing or materials.

Excluded from the warranty is any damage due to improper use or due the actions of a third party or force majeure. This also applies to the accessories which are subject to normal wear and tear (batteries etc.). Further claims, such as equalisation payments are similarly excluded, even if the damage to the device comes under the warranty.

The mobile phone has undergone rigorous quality control testing. Should you nevertheless still have a problem with the product, please first of all contact our

Technical Service Hotline

+49 1805 1188 702

(14 cents/minute from the fixed network of Deutsche Telekom,

charges from mobile networks may deviate from this)

+31-208082856

+32-28088878

+33-368780307

Should a case under warranty arise, send the device to our service team, enclosing a description of the fault and the purchase receipt. Devices sent in without a purchase receipt can only be repaired against payment. The

same also applies in the event that the device is not packed properly.
We reserve the right to make formal changes that serve to improve and further develop the product.

© International Brand Distribution GmbH 07/2010

The AURO M401 mobile phone conforms to the European Union's R&TTE directive. In addition to this, it meets the EU's Electromagnetic Compatibility (EMC) and Product Safety Directives. As a result, the AURO M401 bears the CE mark. You can view the declaration of conformity and the certificates of EU type-approval and registration under www.branddistribution.de.